 


Installing Software

1. Insert your CD or click "download trial" from <http://www.aqualab.com/aqualink>
2. When prompted, enter the required user information and the Registration Key located below.
3. Follow the on-screen instructions to install AquaLink on your PC.

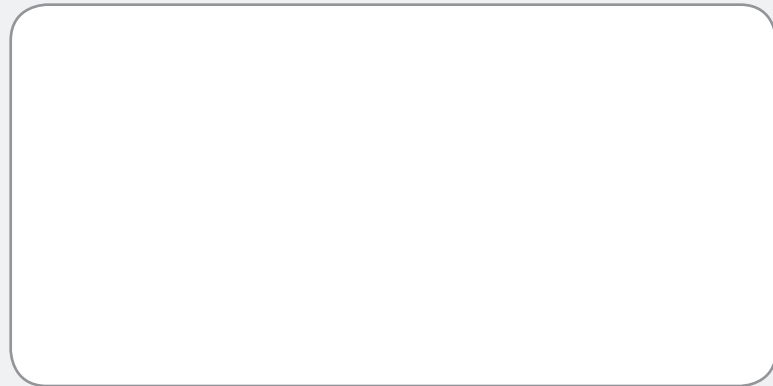

Operation System: Windows XP
 Processor: Pentium IV/Atom
 RAM: 512 MB
 Free Hard Drive Space: 1 GB
 Monitor: 800x600 resolution

Recommended System Requirements

Operation System: Windows XP/Windows 7
 Processor: Pentium Core 2 Duo
 RAM: 2 GB
 Free Hard Drive Space: 20 GB
 Monitor: 1024x768 resolution



AquaLink 4

Water Activity/Moisture Content
 Data Management Software



AquaLink 4 Quickstart Guide

AQUALINK DATABASE AND GRAPHING MAKES MOISTURE ANALYSIS DATA SAFER, MORE ACCESSIBLE AND MORE USEFUL

Connect to a computer

1. Connect serial cable or USB/serial adapter between the serial port on the AquaLab and serial port or USB port on your computer.
2. Under Connect Via, use the drop down arrow to select the correct port.
3. Click Connect

Sharing and Graphing Data

To share data:
 Click Export and Save as an Excel file.

To graph data:
 Simply click the Chart button.

Inserting and Deleting Columns

To insert a column:
 Use the drop down arrow to the left of where you want place a new column and select Insert Column.

To delete a column:
 Use the drop down arrow and select Delete.

Contact us at:
support@aqualab.com
 509-332-5601

