**METER** 

2. Remove the four

screws from the main board using a

Phillips screwdriver.

**METER** 

The reference barometer sensor in the ZL6 data logger should be replaced if it malfunctions or if it needs to be calibrated. These step-by-step instructions will explain the replacement process. A #1 Phillips screwdriver is required for installation.

**ZL6 Reference Barometer** 

**Sensor Replacement** 


#### ACCESS REFERENCE BAROMETER SENSOR


▲ CAUTION: Do not disconnect any wiring.

1. Remove a battery to turn off the ZL6, and press TEST button to clear power in logger.

**METER** 


2. Remove the four screws from the main board using a Phillips screwdriver.

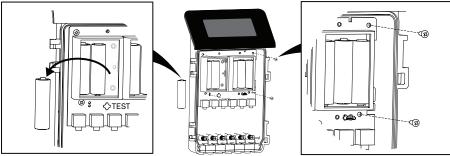

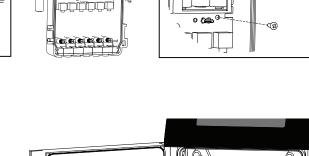


3. Carefully lift up the main board and rotate over to expose the underside.

> NOTE: No need to disconnect the antenna.

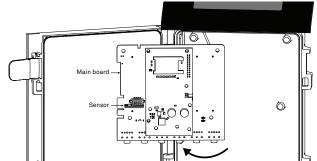

# **REMOVE AND REPLACE SENSOR**

- 4. Lifting straight up, remove the existing sensor and discard.
- 5. Pressing straight down, insert the new sensor into the daughterboard connector.

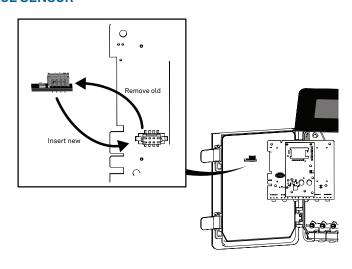


The reference barometer sensor in the ZL6 data logger should be replaced if it malfunctions or if it needs to be calibrated. These step-by-step instructions will explain the replacement process. A #1 Phillips screwdriver is required for installation.

# **ACCESS REFERENCE BAROMETER SENSOR**


▲ CAUTION: Do not disconnect any wiring.

1. Remove a battery to turn off the ZL6, and press TEST button to clear power in logger.

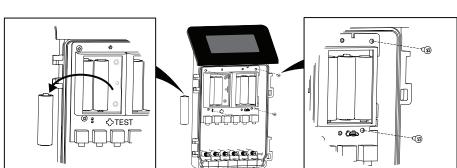


3. Carefully lift up the main board and rotate over to expose the underside.

> NOTE: No need to disconnect the antenna.

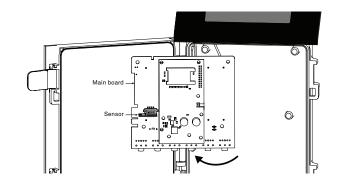

# **REMOVE AND REPLACE SENSOR**

- 4. Lifting straight up, remove the existing sensor and discard.
- 5. Pressing straight down, insert the new sensor into the daughterboard connector.

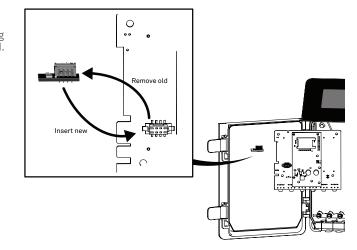


The reference barometer sensor in the ZL6 data logger should be replaced if it malfunctions or if it needs to be calibrated. These step-by-step instructions will explain the replacement process. A #1 Phillips screwdriver is required for installation.

#### **ACCESS REFERENCE BAROMETER SENSOR**


▲ CAUTION: Do not disconnect any wiring.

1. Remove a battery to turn off the ZL6, and press TEST button to clear power in logger. 2. Remove the four screws from the main board using a Phillips screwdriver.

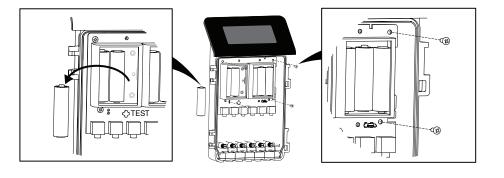


3. Carefully lift up the main board and rotate over to expose the underside.

> NOTE: No need to disconnect the antenna.

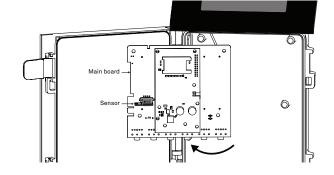



# REMOVE AND REPLACE SENSOR

- 4. Lifting straight up, remove the existing sensor and discard.
- 5. Pressing straight down, insert the new sensor into the daughterboard connector.

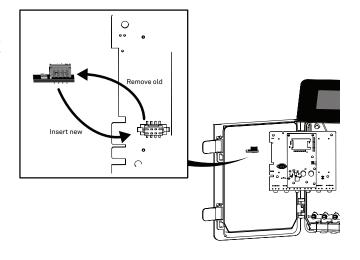

#### RETURN MAIN BOARD TO ORIGINAL POSITION

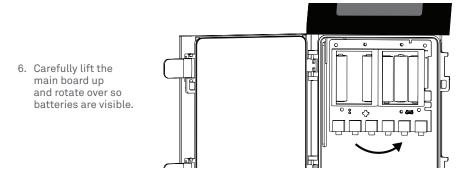

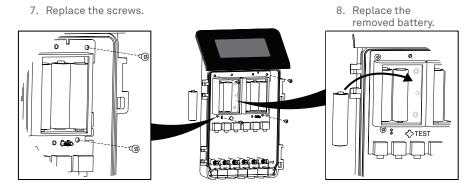

 Connect to the logger and check ZENTRA Utility to ensure barometer and temperature readings are available. Press the TEST button on the ZL6 to reset the logger if the readings do not appear.

#### **CUSTOMER SERVICE**

# **NORTH AMERICA**

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 7:00 am to 5:00 pm Pacific time.

Email: support.environment@metergroup.com sales.environment@metergroup.com

Phone: +1.509.332.5600

Fax: +1.509.332.5158

Website: metergroup.com

## **EUROPE**

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 8:00 to 17:00 Central European time.

**Email:** support@metergroup.de sales@metergroup.de

Phone: +49 89 12 66 52 0

Fax: +49 89 12 66 52 20


Website: metergroup.de


If contacting METER by email, please include the following information:

Name Email address Instrument serial number Address Phone Description of the problem

NOTE: For products purchased through a distributor, please contact distributor directly for assistance.

#### **RETURN MAIN BOARD TO ORIGINAL POSITION**

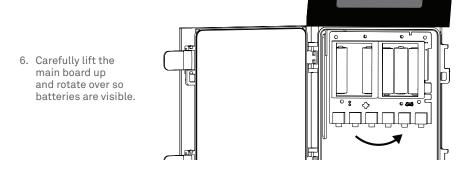

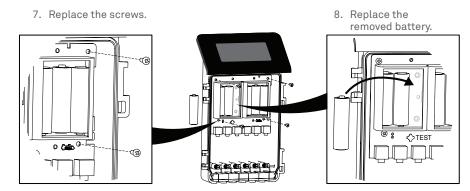

9. Connect to the logger and check ZENTRA Utility to ensure barometer and temperature readings are available. Press the TEST button on the ZL6 to reset the logger if the readings do not appear.

#### **CUSTOMER SERVICE**

#### **NORTH AMERICA**

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 7:00 am to 5:00 pm Pacific time.

**Email:** support.environment@metergroup.com sales.environment@metergroup.com

Phone: +1.509.332.5600 Fax: +1.509.332.5158

Fax: +1.509.332.5158
Website: metergroup.com

## **EUROPE**

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 8:00 to 17:00 Central European time.

**Email:** support@metergroup.de sales@metergroup.de

Phone: +49 89 12 66 52 0

Fax: +49 89 12 66 52 20


Website: metergroup.de


If contacting METER by email, please include the following information:

Name Email address Instrument serial number Address Phone Description of the problem

NOTE: For products purchased through a distributor, please contact distributor directly for assistance.

## RETURN MAIN BOARD TO ORIGINAL POSITION

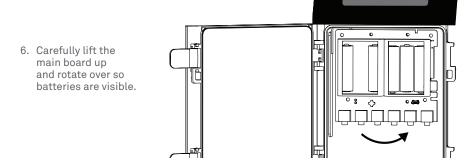

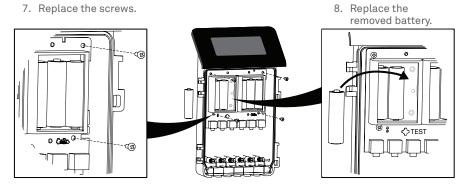

 Connect to the logger and check ZENTRA Utility to ensure barometer and temperature readings are available. Press the TEST button on the ZL6 to reset the logger if the readings do not appear.

# **CUSTOMER SERVICE**

# **NORTH AMERICA**

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 7:00 am to 5:00 pm Pacific time.

**Email:** support.environment@metergroup.com sales.environment@metergroup.com

Phone: +1.509.332.5600

Fax: +1.509.332.5158

Website: metergroup.com

## **EUROPE**

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 8:00 to 17:00 Central European time.

Email: support@metergroup.de

sales@metergroup.de

Phone: +49 89 12 66 52 0

Fax: +49 89 12 66 52 20

Website: metergroup.de

If contacting METER by email, please include the following information:

Name Email address Instrument serial number
Address Phone Description of the problem

NOTE: For products purchased through a distributor, please contact distributor directly for assistance.