



# SOLYX GO<sup>®</sup> CDX SOIL MOISTURE SENSOR

METER



## SUPPORT

Have a question or problem? Our support team can help.

We manufacture, test, calibrate, and repair every instrument in house. Our scientists and technicians use the instruments every day in our product testing lab. No matter what your question is, we have someone who can help you answer it.

### NORTH AMERICA

Email: [support.environment@metergroup.com](mailto:support.environment@metergroup.com)  
Phone: +1.509.332.5600

### EUROPE

Email: [support.europe@metergroup.com](mailto:support.europe@metergroup.com)  
Phone: +49 89 12 66 52 0

# SOLYX GO QUICK START

## Preparation

Confirm that SOLYX GO components are intact.

Before use in the field, ensure the SOLYX GO turns on and is charged by pressing the power button. The battery LEDs should be illuminated and the Bluetooth LED blinking.

Charge the SOLYX GO as needed.



QR Code to the user manual for more details

## Connecting to the SOLYX GO App

A SOLYX GO device (hardware) records data via the SOLYX GO smart phone app (software).




QR code to download the app

## Taking a Measurement and Collecting Data

### 1. OPEN SOLYX GO APP

Sign in to ZENTRA Cloud using the app. From the initial Dashboard screen, select **Add New**.

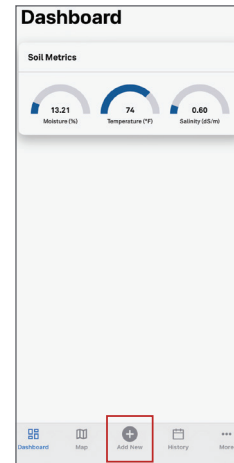

### ATTENTION


For best results, use the latest versions of METER software and firmware for the computer or mobile device, products, and sensors. Please use the software Help menu to find updates. Consult the sensor user manual for more troubleshooting tips.

### 2. CONNECT DEVICE TO APP

The **Device Connection** screen will show the SOLYX GO. Select to connect.

If multiple devices are in range, select by serial number.

Once connected, the app will go to the **Select Surface** screen. Select a surface, or **Add Surface**, to take a measurement.

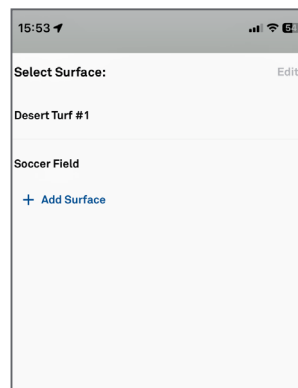


### 3. DATA COLLECTION

When a surface is selected, the app will track movement and display it on the app as a blue dot.

If the position is not accurate, the GPS tracking can be turned off by pressing the blue button in the bottom right corner of the map or by restarting the device.

At the desired location for data collection, insert the SOLYX GO fully into the ground and press one of the action buttons on the control panel to take a measurement.

Repeat as needed at different locations for each surface or field site.

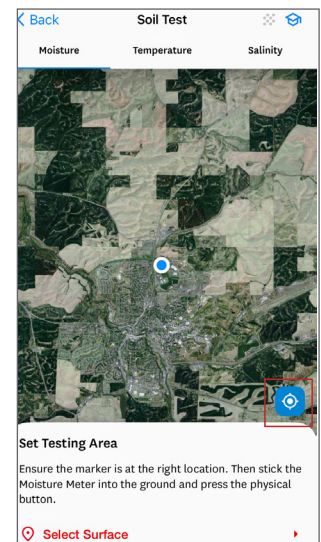

### 4. COMPLETE AND SAVE

Press **Complete Test** when done and save the results to the calendar.

To access past results, select the **History** calendar icon on the main dashboard screen.

